Westinghouse

USER'S MANUAL

VR-3725

Contents

1	Caution
2-6	Safety Information
7	Unit and Accessory
8	Getting Started
8	Front View
9	Rear View
10-11	Remote Control Key Functions
12	Basic Operation
13-16	Initial Setup
17	Input Source menu
17	Main Menu
18-20	Picture Menu
21-22	Sound Menu
23-24	Channel Menu
25-26	Parenal Control Menu
27-28	Setup menu
28	Others Menu
29	Help

Caution

The lightening flash with arrowhead symbol ,within an equilateral triangle is intended to alert the user to the presence of un-insulated"dangerous voltage" within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to the persons.

The exclamation point within an equilateral triangle isintend to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Correct disposal of this Product

Waste Electrical & Electronic Equipment (WEEE)
Your product is designed and manufactured with high quality materials and components which can be recycled and reused.
This symbol means that electrical and electronic equipment,at their end-of-life, should be disposed of separately from your household waste.
collection /recycling centre.
In the European Union there are separate collection systems for used electrical and electronic products.Please help us to conserve the environment welivein!

Safety Information

1) Read these instructions.
2) Keep these instructions.
3) Heed all warnings.
4) Follow all instructions.
5) Do not use this apparatus near water.
6) Clean only with dry cloth.
7) Do not block any ventilation openings.
8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety, If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10) Protect the power cord from being walked on or pinched particularly at Plugs, convenience receptacles, and the point where they exit from the apparatus.
11) Only use attachments /accessories specified by the manufacturer.
12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used caution when moving the cart/apparatus combination to avoid injury tip-over.

13) Unplug this apparatus during lightning storms or when unused for long periods of time.
14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus. The apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15）The apparatus shall be disconnected from the mains by placing the power/standby switch in the standby position and unplugging the power cord of the apparatus from the AC mains receptacle.
16) The socket-out shall be installed near the equipment and shall be easily accessible.
17) This product should never be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacture's instructions have been adhered to.
18) The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquid, such as vases, shall be placed on the apparatus.
19) Operating environment:
Temperature: 5°C~33°C
Humidity: 20% to 85% non-condensing
Atmospheric pressure: 800 to 1100hPa

Safety Guidelines

Caution: Always use a power cable is properly grounded. Please use the AC cords listed below for each area:

USA ..... UL
Canada ..... CSA/cUL

FCC Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference will not occur in a particular installation. If this equipment does cause by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Warning

To assure continued FCC compliance, the user must the provided grounded power supply cord and the provided shielded video interface cables to connect to this equipment. Also, any unauthorized changes or modifications to this equipment would void the user's authority to operate this device.

Important Safeguards

Safety of operators has been taken into consideration at the design and manufacture phase, but inappropriate operation may cause electric shock or fire. To prevent the product from being damaged, the following rules should be observed for the installation, use and maintenance of the product. Read the following safety instructions before starting the operation.

The User Manual uses the following symbols to ensure a safe operation and prevent any damage to operators or properties:

WARNING----- Ignorance or inappropriate use may cause damage to the product.

ATTENTION-– Ignorance or inappropriate use may cause injury to the user.

Examples:

Prohibition

Warning (Attention) symbol (indicating “Electric Shock”).

WARNING

Do not install the product on sloping or unstable surface:
The product may drop or tip over.

Only the marked power source can be used for the product:
Any power source other than the specified one may cause fire or electric shock.

Keep the product away from moisture:

- Do not expose this appliance to rain or moisture.
- If water penetrates into the product, stop the operation; unplug the connector and contact your dealer. Continuous use in this case may result in fire or electric shock.

WARNING

Do not place any objects on the top of the product:
Spilled water or metal objects may cause short circuit, fire or electric shock if they penetrate into the housing of the product.

Never use a damaged power cord:
Heavy objects, heat or tensile force may damage the power cord and cause fire or electric shock.

Do not change or open the back cover:
Removing the back cover of the product may cause fire or electric shock. Contact the manufacturer when inspection or adjustment is required.

Do not use the product if any abnormality occurs:
If any smoke or odor becomes apparent, unplug the connector and contact the manufacturer immediately. Do not try to repair the product by yourself.

WARNING

Avoid using dropped or damaged appliances:
If the product is dropped and the housing is damaged, the internal components may function abnormally. Unplug the connector immediately and contact the manufacturer for repair. Continuous use of the product may cause fire or electric shock.

Do not touch the power cord during lightning:
To avoid electric shock, avoid handling the power cord during thunder storms.

ATTENTION

Do not install the product close to smoke or moisture:
Fire or electric shock may be caused when the product is installed close to smoke or moisture.

Do not install the product in an area with heavy dust or high humidity:
Fire or electric shock may be caused when the product is installed in a place with heavy dust or high humidity.

Instructions for moving the product:
Ensure that the power connector and any other leads are unplugged before moving the product.

The power cable should be kept away from heat sources:
The heat produced by any heat source may melt the covering of the power cable.

Hold the power connector when removing the power cable:
Pulling the power cable itself may damage the wires inside the cable and cause fire or electric shock.

Do not touch the connector with wet hands:
To avoid risk of electric shock.

ATTENTION

Insert batteries in accordance with instructions:
Insert the batteries with correct polarities (positive ⊕ and negative ⊖).
Incorrect polarities may cause breakage and leakage of the batteries, hurt operators and contaminate the remote controller.

Do not block or cover the vents:
Blocking the vents may cause overheating and fire. Do not install the product in a place with little or no ventilation. Never cover the vents with towels, blankets or dusters.

Unplug the connector:
Unplug the power connector when the product will not be used for a long time.

Image Sticking:
The plasma monitor illuminates phosphor to display images. The phosphor has a finite illumination life. After extended periods of illumination, the brightness of the phosphor will be degraded to such extend that stationary images would burn-in that part of the screen as grayed-out images.
Tips to prevent such image sticking are:

- Do not display static images of high contrast and high brightness for long periods. Use of video games and computers on this product may promote burn in of images on the screen. Many portions of video game play and computer desktops do not refresh and will contribute to this problem.
- Do not leave stationary images appearing for long, but try to refresh them at appropriate intervals of time, or try to move them using screen saver function.
- Turn down the contrast and brightness control.

Note:
Such "Image Sticking" constitute misuse are NOT COVERED by the manufacturer's warranty.

Others:
This product is designed for indoor use only and is not suitable for out door use.

Unit and Accessory

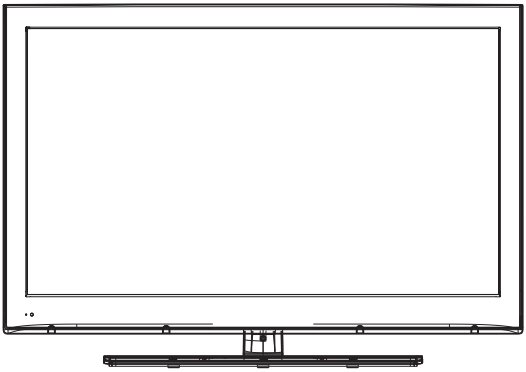

TV set

Remote Control



User's Manual

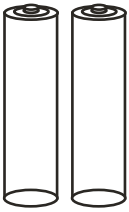

Battery (only the 7th battery)

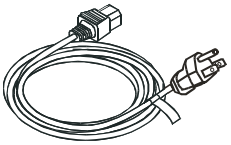

Mains cable

Getting Started

Front view

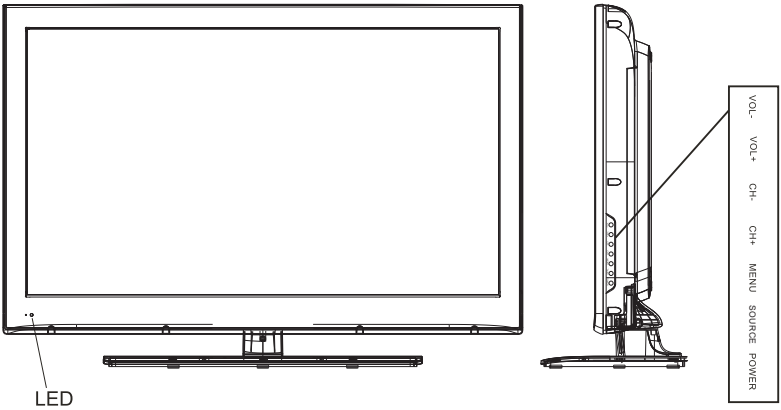

- (IR) Infrared Receiver: Receives IR signals from the remote control.
  (Power on/Standby) LED Indicator: Press **POWER** to turn on and off,

Indicator on(Red)	Standby mode
Indicator on(Green)	Power on mode

The effective receiving scope for the signal is 5-8 meters from the front of the remote control window, and 30° to the left or right side and 20° above or below the control window.

- The functions of the buttons are described as bellows:

SOURCE: Press to change TV AV YPbPr VGA HDMI1,2,3,4 .
MENU : Press to display the OSD menu, Press again to exit the menu.
CH +/-: Press to scan through channels.
VOL +/-: Press to adjust the volume.
POWER: Turn on/standby the TV set.

Rear view

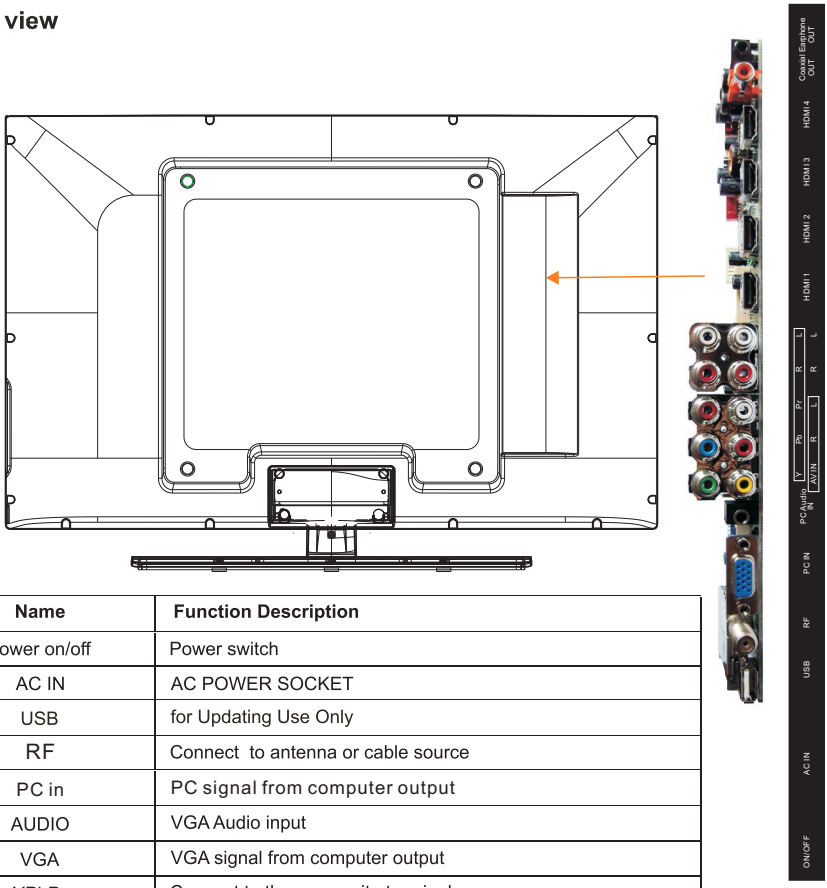

Name	Function Description
Power on/off	Power switch
AC IN	AC POWER SOCKET
USB	for Updating Use Only
RF	Connect to antenna or cable source
PC in	PC signal from computer output
AUDIO	VGA Audio input
VGA	VGA signal from computer output
YPbPr	Connect to the composite terminal
HDMI x 4	Connect to HDMI
COAXIAL	Digital audio output
Earphone	Earphone out

Remote Control Key Functions

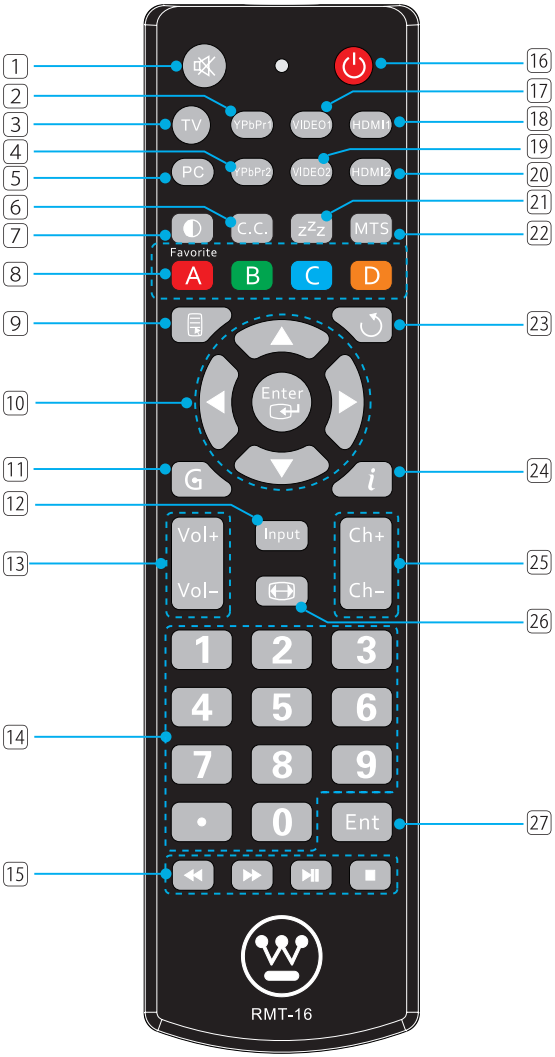

Remote Control Key Functions

1. Mute button ( )
   Mutes or unmutes audio.
2. YPbPr1 button
   Quickly switch input to YPbPr 1 source.
3. TV button
   Quickly switch input to TV source.
4. YPbPr2 button
   Quickly switch input to YPbPr 2 source.
5. PC button
   Quickly switch input to PC mode.
6. CC button
   Turn on Closed Caption or off. Available at TV/AV.
7. P Mode button ( )
   Quickly switch the predetermined picture mode. Standard/Movie/User/Dynamic.
8. Favorite button
   Display favourite channel list.
   Colour button
   The action they perform is shown on the menu and changes for each menu.
9. Menu button
   Press to display the menu.
10. Navigation(▲▼◀▶)
    Navigates through the menus.
    Enter button
    Activates a selection or accesses the menu.
11. Info button (only for DTV)
    Press to display the channel information.
12. Input button
    Display all source list.
13. Vol+/Vol- button
    Adjust speaker volume level.
14. Digit (0~9), Dot buttons
    Input the channel number or password. When switch to a digital channel, usually should be followed by Dot button and minor channel number. Enter button to confirm.
15. DVD Control button
    Not available for this model.
16. Standby button
    Control TV to standby or on.
17. Video1 button
    Quickly switch input to Video1 source.
18. HDMI1 button
    Quickly switch input to HDMI1 source.
19. Video2 button
    Quickly switch input to Video1 source.
20. HDMI2 button
    Quickly switch input to HDMI2 source.
21. Sleep button ( )
    Sets a delay after which the TV switches to standby.
22. MTS button
    Switch sound channel. Mono/ Stereo/SAP when analog channel. English and other languages when digital channel.
23. Back button
    Returns to a previous screen.
24. Info button
    Display information about the TV channel or accessory device.
25. CH +/- button
    Switches to the next or previous channel.
26. Aspect button
    Press to select Aspect Ration.
27. Enter button
    . Confirm a selection.

Choosing a TV channel

Power ON/OFF

Press the Power button on the top of TV or remote control to power on the TV(Green LED indictor will light). Press again to power OFF(Standby) the TV(Red LED indicator will light).

CHANNEL SETTING

Press the CH+ or CH- buttons to select a preset channel as desired.
For direct channels access:
Enter the channel number by press the numeric and/or"-" buttons on the remote control, a few secons later, the selectd channel will apper on screen.

Volume adjustment

VOLUME SETTING
Press the VOL+ or VOL- buttons to adjust the volume as desired.

MUTE

Press once the TV's sound will be silenced and MUTE will appear on the screen. Press again to turn the sound back.

Selecting input source

TV/AV SETTING

1. Press the INPUT button on the remote control. the list of sources will appear on the screen.
2. Press the Navigator ▲or▼button to select the desired input source then press the OK (enter) button to confirmed the selection.
3. Or, press the TV/AV button on the top of TV repeatedly to select the desire input source.

Initial Setup

When you turn on the TV for the first time, the Initial Setup will guide you through the setup process. Perform the following steps before you press POWER on the remote control unit.

1. Language setting

The Initial Setup screen display at the rst use Select the OSD menu language from English, French, or Spanish. Press▲ and ▼button to sellect the desired language listed on the screen and then press the MENU button to the next step.

Select Language
Follow this guide to help you up your TV. Use the Up and Down arrows on your remote control and select the language you want to use for menus and messages screens.
English
Enter
French
Enter
Spanish
Enter
: Move
MENU
: Press to Execute

2. Time Zone setting

Press ▲ and ▼ button to select your current location for time zone, and then press the ENTER button to the next step.

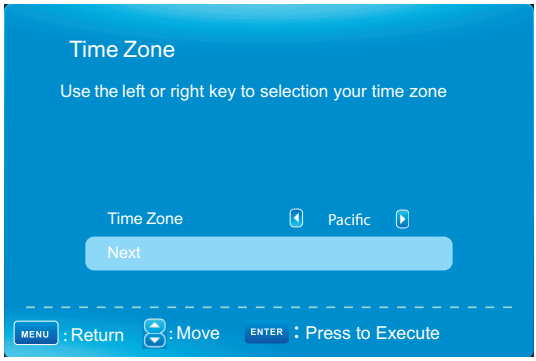

1. Location setting

Press ▲ and ▼ button to select “Home” or “Showroom” and press button to the next step.

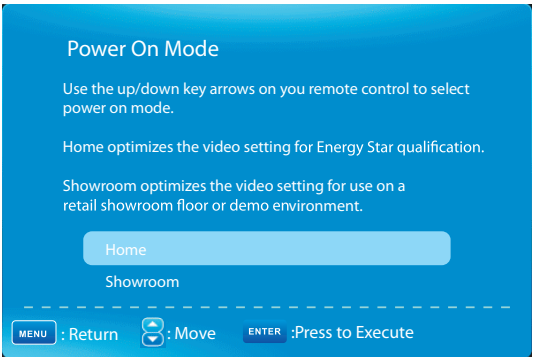
Power On Mode
Use the up/down key arrows on you remote control to select power on mode.
Home optimizes the video setting for Energy Star qualification.
Showroom optimizes the video setting for use on a retail showroom floor or demo environment.
Home
Showroom
MENU : Return
: Move
ENTER :Press to Execute

4. Signal select

Press▲ and ▼ button to select "Cable Box or Satellite Box”, "Game, Blu-Ray DVD or other player” or “Antenna or coaxial cable input” and then press ENTER button to the next step.

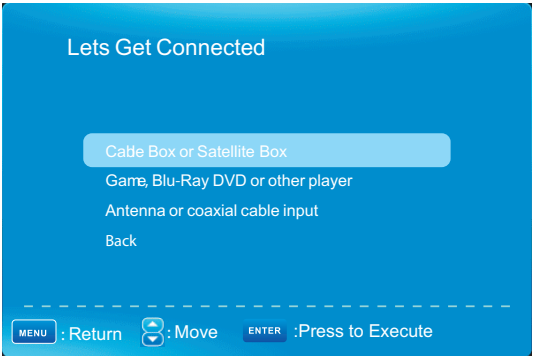

5.Cable or Satellite Box Input selection

Make sure what kind of connection is made with your TV when selecting for Source select item.

Press▲ and ▼ button to select “Next and then press ENTER button to continue.

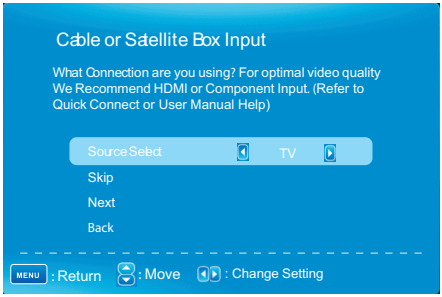

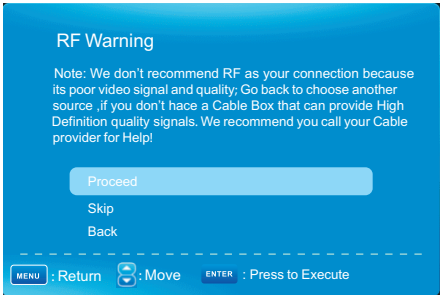
RF Warning
Note: We don't recommend RF as your connection because
its poor video signal and quality; Go back to choose another
source ,if you don't hace a Cable Box that can provide High
Definition quality signals. We recommend you call your Cable
provider for Help!
Proceed
Skip
Back
MENU : Return
: Move
ENTER : Press to Execute

6. Other source select

Press▲ and ▼button to select input source and then press ENTER button to the next step.

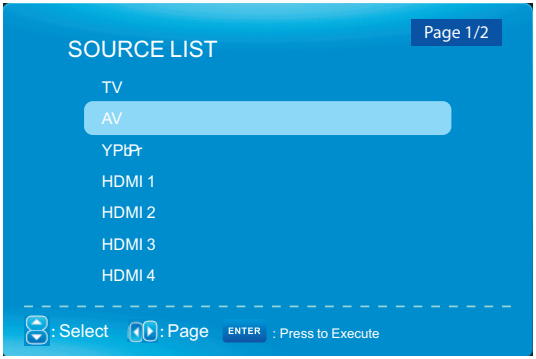

7.Channel scan select

Press▲ and▼button to select Antenna [ATSC] or Cable, and then press ENTER button to the next step.

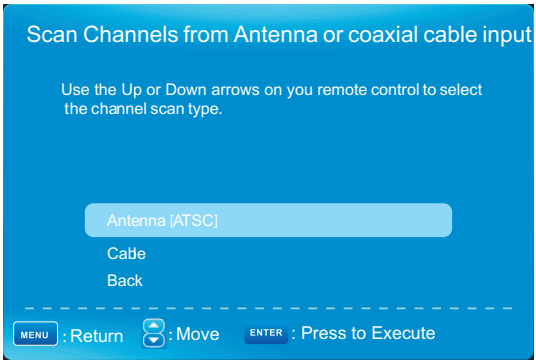
Scan Channels from Antenna or coaxial cable input
Use the Up or Down arrows on you remote control to select the channel scan type.
Antenna [ATSC]
Cable
Back
MENU : Return
: Move
ENTER : Press to Execute

8. ATSC channel access selection

Some of the ATSC channel require the access code.

Press ▲ and▼button to select “Next” and then press ENTER button to next step. The 5 digit access code provided by the channel access service.

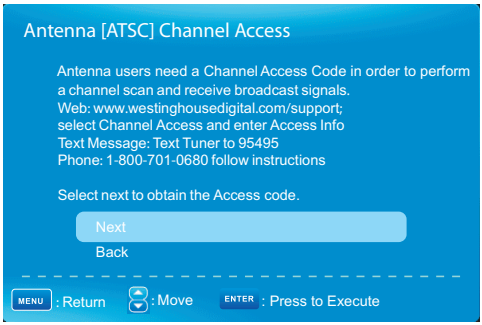
Antenna [ATSC] Channel Access
Antenna users need a Channel Access Code in order to perform a channel scan and receive broadcast signals.
Web: www.westinghousedigital.com/support;
select Channel Access and enter Access Info
Text Message: Text Tuner to 95495
Phone: 1-800-701-0680 follow instructions
Select next to obtain the Access code.
Next
Back
MENU : Return
: Move
ENTER : Press to Execute

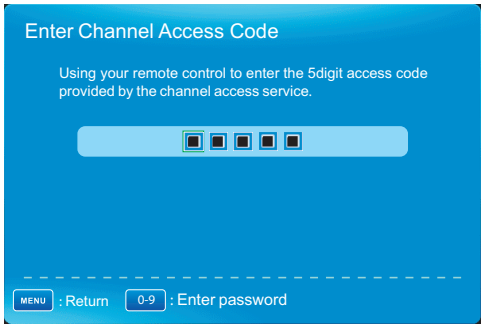
Enter Channel Access Code
Using your remote control to enter the 5digit access code provided by the channel access service.
MENU : Return
0-9 : Enter password

Input Source

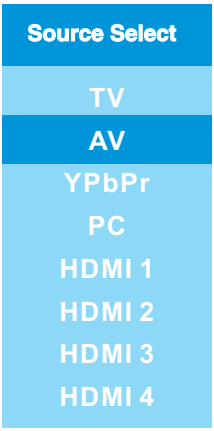

Press INPUT to display the input source list.
Press ▼/▲ to select the input source and ENTER to confirm.

Main Menu

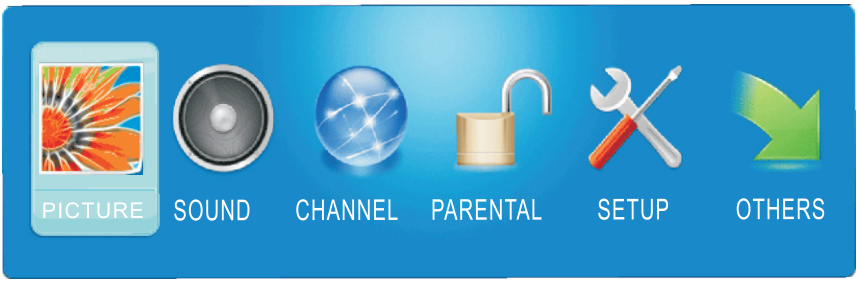

Press MENU to display the main menu or return to the previous menu or close the main menu.
Press ◄/► to highlight the desired menu icon, and press ENTER to select.

If no buttons are pressed, the menu will close automatically after about 10 seconds.

Picture Menu

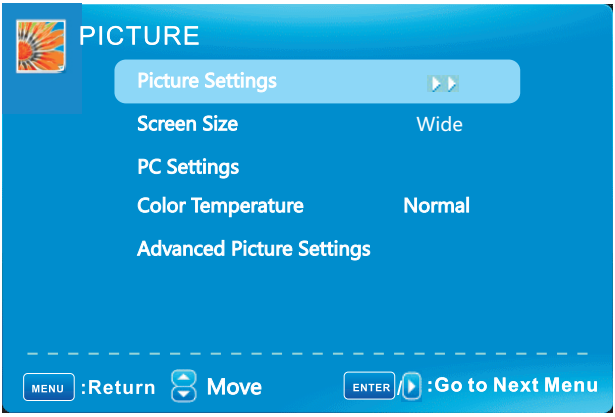

Press ▼/▲ to highlight one of the following options, then press ENTER or ► to enter next sub-menu to adjust it. Press EXIT to clear on-screen menu or MENU back to the previous menu.

Picture Settings Adjust the picture quality including brightness, contrast, color, tint, sharpness. For details, see page 8.

Screen Size Press◄/►to selet the display aspect ratio till the picture is fit onto the screen. The options are different according to different input source.
PC Wide/Dot by Dot. Dot by Dot means NOT any scaling to original input pixels size.
AV/YPbPr/HDMI/TV Normal/Wide/Cinema/Zoom.Generally each aspect ratio is suitable for one input format. For example Normal is suitable to watch common TV program. Wide will do horizontal scaling on the wide panel. Cinema is for the 2.39:1(perhaps marked as 2.40:1 on the disc) film. Zoom is suitable to view the analog TV which has wide(16:9) content on the 16:9 panel.

PC Settings The item is available only for PC DB15or PC DVI input mode, see page 15.

Color Temperature Press◄/► to select the color temperature that you feel comfortable.
Normal Basically will be accepted by most people.
Cool means a high color temperature that will feel cool.
Warm means a low color temperature that will feel warm.

Advanced Picture Settings The item is some special picture feature ,see page 16.

Picture Settings

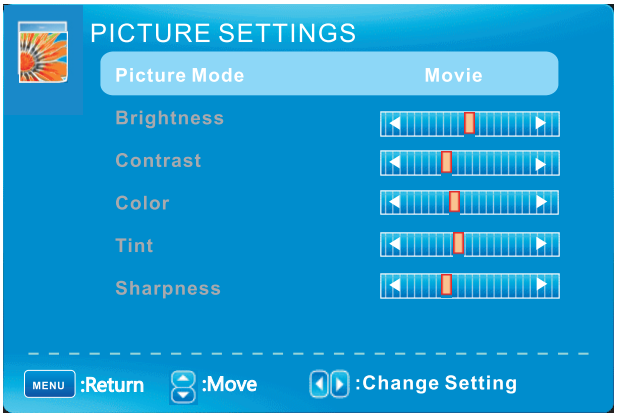

When Picture Mode is set to User, the following settings can be manually adjusted.

Press PMODE shortcut button on the remote control to select picture mode directly.

Adjusting the values

Picture Mode

Highlight the item and Press ◄/► to select. *Movie/Dynamic/Standard/User*

Brightness/Contrast/Color/Tint/Sharpness

Highlight the item and press ►, and a process bar appears, then press ◄/► to adjust the value. Tint is available when analog TV or NTSC-system AV or Svideo. Press MENU to back the Picture Settings menu.

PC Settings

PC Settings Menu is aviliable only in PC DB15 or DVI mode. When DVI signal input, only Horizontal.
Position and Vertical Position can be adjusted.

Press ▼/▲ to highlight one of the following options, then press ENTER to select it.

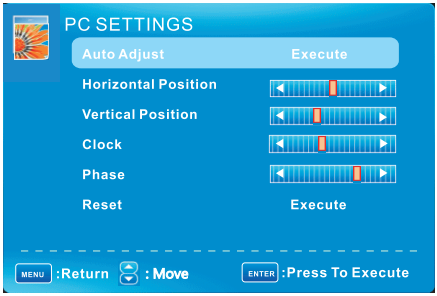

Auto Adjust Automatically adjust Clock, Phase, H-Position and V-Position settings. In order to get a good result, you should open a"filling the screen"picture before executing Auto Adjust.

Horizontal Position Shift the screen slightly to left or right.

Vertical Position Shift the screen slightly up or down.

Clock Adjust the DB15 picture signal sampling clock rate.

Phase Adjust the Db15 picture signal sampling phase. It maybe affect the definition . Wrong value maybe result the interference.

Reset Reset the parameters of current menu to default value.

Advanced Picture Settings

Press ▼/▲ to highlight the item and press ENTER or ► to display the sub-menu as following.

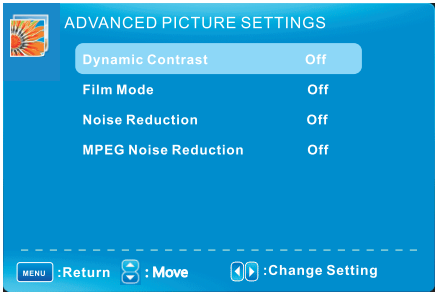

Dynamic Contrast *Off/Low/Medium/High*

The system will adjust the luminance curve by analyzing the picture content dynamically.

Film Mode *Off/On*

For the 2:2 or 3:2 format signal of cinema , enable special pixel process to reduce the flick of moving area.

Noise Reduction *Off/Low/Medium/High*

You can clear up analog TV signal by reducing the dot noise. This feature is not available at PC or Media source.

MPEG Noise Reduction *Off/Low/Medium/High*

Similar with the *Noise Reduction*, you can set to reduce the block noise.

Sound Menu

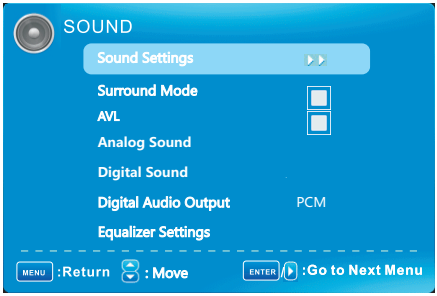

Sound Settings Set the sound mode, and Bass /Treble/Balance, see page 12.

Surround Mode Set to enjoy the virtual surround sound. Press ENTER to set or cancel.

AVL Auto Volume Level. Press ENTER to set or cancel. When AVL is set on, it will limit the sound being heard when sudden changes in volume occur during commercial breaks or Generally SAP is a second language sound or help the people with hearing impair.

Digital Sound Available at digital TV channels. *English/French/Spanish*
Set the preferred sound track of digital channels. French and Spanish exist on some channels.

Digital Audio Output *PCM/Raw/Off*
Set the preferred sound track of digital channels. French and Spanish exist on some channels. audio stream. *PCM* can be matched with most AV amplifiers.

Digital Audio Output *PCM/Raw/Off*
Set the audio output type of coax or optical terminal. *Raw* means output the original format of audio stream. *PCM* can be matched with most AV amplifiers.

Equalizer Settings Adjust the curve of 7 bands equalizer, see page 13.

Sound Settings

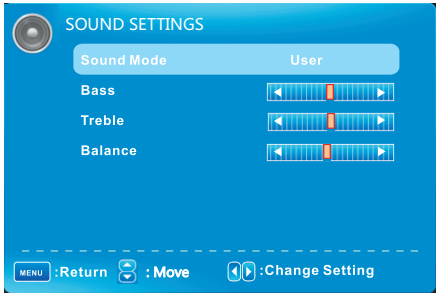

Sound Mode *Standard/Dynamic/Soft/User*
Only in User mode, the follow items can be adjusted.

Bass Adjust the low frequency band response.

Treble Adjust the high frequency band response.

Balance Adjust the level of sound coming from the left or right speaker.

Adjust the Bass/Treble/Balance

1 Set Sound Mode to User.
2 Highlight the item and press ◄/► to display the sub-menu, then press ◄/► to adjust the value.



Equalizer Settings

Mode *Off/Rock/Pop/Jazz/User*(only in User mode, the following can be manually adjusted.)

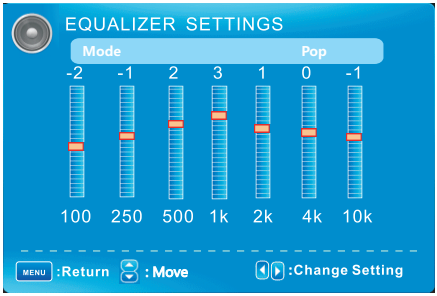

Adjust Equalizer Settings

Mode Based on your favorites about which frequency band need to be adjusted, make small adjustment with certain frequency band at a time. Suggest NOT making too large changes.

1 Set Mode to User.

2 Press▼ to select the first(100Hz) item, then press◄/► to select the band to be turned.

3 Press▼/▲to adjust the value.

Channel Menu

Note: The menu is available only at TV source.

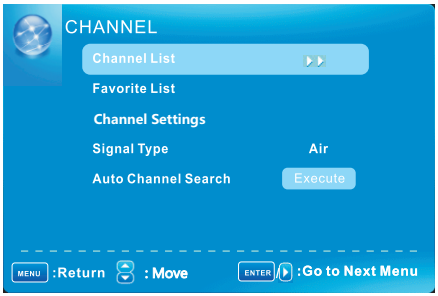

Channel List You can view all the channels and choose one quickly.
For details of setting, see page 15.

Favorite List All of you favorite channels are listed in this menu, and you can choose them quickly. For details of setting, see page 15.

Channel Setting Set the favorite channels, skipped channels, label of channels, see page 17.

Signal Type Set to Air or Cable according to your antenna source. When set to Air, TV can catch 8VSB broadcasting signal. When set to Cable, TV can catch analog and clear 64QAM/256QAM broadcasting signal.

Auto Channel Search Highlight and press ENTER to start the auto searching, see page16.

Channel List

"ABC": Label of the Channel .
Press▼/▲to highlight a channel and press ENTER to view it.

Favorite List

The list shows channels that you set as favorite. See "Channel Settings" on page 17 to understand how to set channels be favorite.

Auto Channel Search

It will search analog channels first, then digital channels.
Before execute auto channel search, please confirm your antenna type is Air or Cable. Wrong setting of Signal Type maybe cause finding no channel. Found numbers do not include encryption programs.

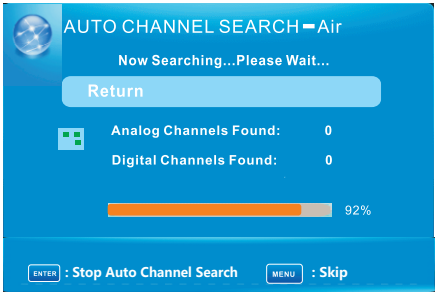

Channel Settings

Skip Set the channel to be skipped when using CH+/Ch- to view channels.
Favorite Set the channel to your favorite list.
Label Rename label of the channel.

Change the settings

Skip & Favorite

1.Press▼/▲to select the channel you want to set.
2.Press◄/►to highlight corresponding item, and press ENTER to set or cancel.

Label

1 Press▼/▲o select the channel and ENTER to enter the edit state.
2 Press◄/►to select the character, press ◄/► to move the cursor. Total seven letters.

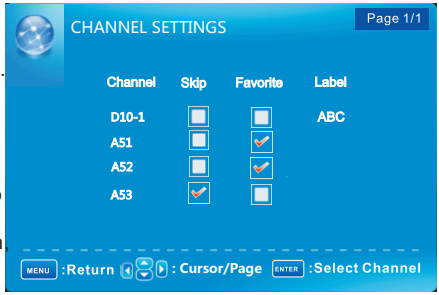

Parental Control

Note: The default user password is “0000”, and if forget what you set, try“1470”.

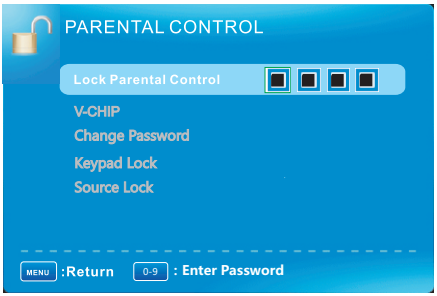

Lock Parental Control The following items are only available if the password input is correct.

V-CHIP Include below settings:
US V-Chip Rating system used at USA. See page 19.
Canada V-Chip Rating system used at Canada. See page 21.
Block UnRated Show Control whether lock the program that have not any valid rating flag.
Downloadable Rating Control the RRT5 setting which are valid only at some digital cable channels.
Clear Downloadable Data Select to clear the previous downloadable rating data.
Change Password Page22
Keypad Lock Set to prevent it from being used by young children, or other unexpected usage.
Source Lock Set to lock the using of specified source.

US V-CHIP

For the United States, the rating setting basically include the following options:
Movie Rating,TV Rating. (For Canada, see page19)

Moive Rating

This system defines the rating control which come from MPAA rules.

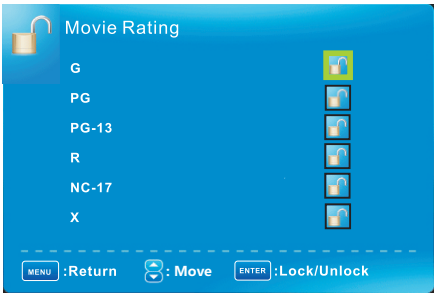

Rating	Define
G	General audience. All ages admitted.
PG	Parental guidance suggested. Some material may not be suitable for children.
PG-13	Parents strongly cautioned. Some material may be inappropriate for children under 13.
R	Restricted. Children under 17 require accompanying parent or adult guardian.
NC-17	No one 17 and under admitted.
X	Adult audience only.

TV Rating

The TV rating compose of two aspects: age-based and content-based.

Age	Define
TV-Y	General audience
TV-Y7	Parental guidance suggested
TV-G	Parents strongly cautioned
TV-PG	Retricted
TV-14	No one 17 and under admitted
TV-MA	Adult audience only

Content	Define
FV	Fantasy violence
D	Suggestive dialogue
L	Strong language
S	Sexual situations
V	Violence

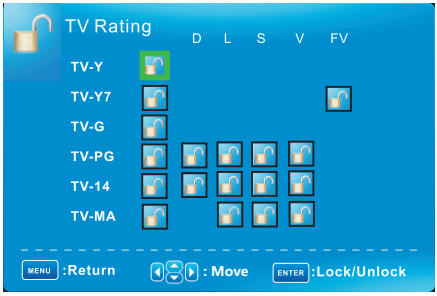

Note: The content ratings will increase depending on the level of the age-based rating. For example, a program with a TV-PG V(violence) rating may contain moderate violence, while a TV-14 V(violence) rating may contain intense violence. So locking a higher level option will automatically cause locking the options that has more sensitive level.

Canada V-CHIP

For Canada, the rating setting include the following options: English Rating, French Rating. (For the United States, see page 17)

English Rating

These ratings are for programs which are using English rating system.

Rating	Defined as
C	Children
C8+	Children 8 years and older
G	General programming
PG	Parental guidance
14+	Viewers 14 and older
18+	Adult programming

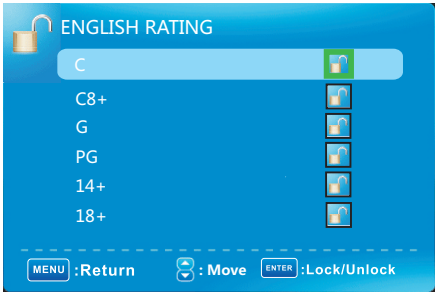

French Rating

The ratings are for programs which are using French rating system.

Rating	Defined as
G	General
8 ans+	Not recommended for younger children
13 ans+	Not recommended for children under age 13
16 ans+	Not recommended for ages under 16
18 ans+	This program is restricted to adults

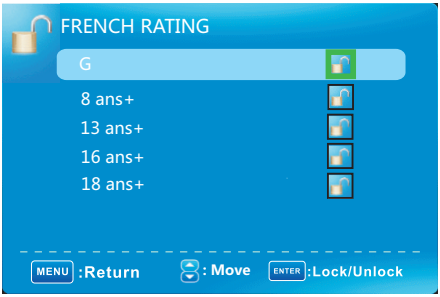

Change Password

At first you should enter the correct old password then enter new password twice.
If you lost your password, try to enter “1470".

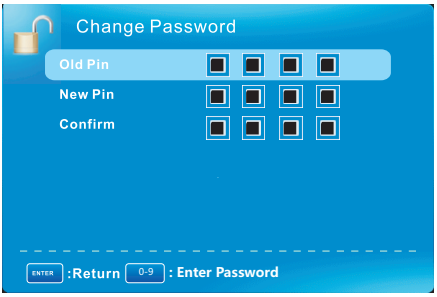

Source Lock

Press▼/▲to select the source you want to lock, then press ENTER to set it to lock. If anyone want to use this source, the password is needed.

Setup Menu

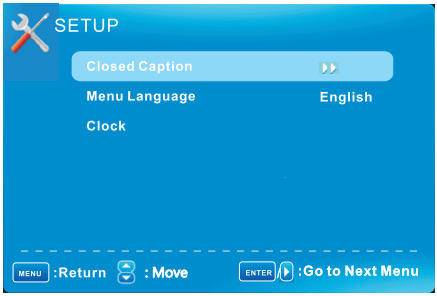

Closed Caption(CC) Include below options:
Caption Display Display or hide the CC .
Analog Caption Type Select from below closed-caption modes for analog programs.
CC1,2,3,4 Displays corresponding caption channel of a analog program.(Usually be set to CC1 for most programs.)
Text1,2,3,4 Displays corresponding text service channel of a analog program.

Digital Caption Type Applies only to digital channels with closed caption.
Service1,2,3,4,5,6 These are different service data channels.
Digital CC Preset *Default/Custom*
If set to Custom, Digital CC Style is available.
Digital CC Style

Menu Language Set the menu language. *English/French/Spanish*.
Clock Set the *Time Zone/Auto Clock/Day of time/Daylight Saving*, see page 25.

Digital CC Style

This menu is valid only for digital closed caption of digital channels.

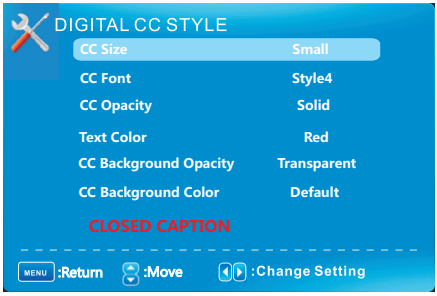

CC Size *Small/Standard/Large/Default*

CC Font *Style0~7,Default*

CC Opacity *Flashing/Default/Solid/Translucent/ Translucent/Transparent/Default*

Text Color *Blue/Yellow/Red/Black/White/Green/ Magenta/Cyan/Default*

CC Background Opacity Flashing/Solid/ Translucent/Transparent/Default

CC Background Color *Blue/Yellow/Red/Black/White/Green/Magenta/Cyan/Default*

Clock

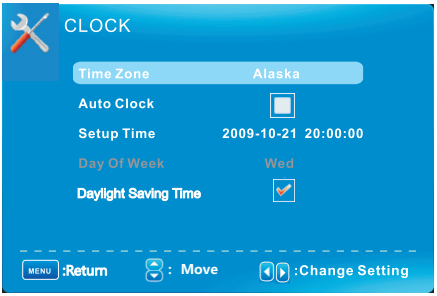

Time Zone *Hawaii/Alaska /Pacific Central/ Mountain/Eastern/ Samoa/Newfounland/ Altantic*

Auto Clock If set it to ON , the TV will sync the local clock according to the DTV broadcasting time automatically. Otherwise you can set the time manually.

Setup Time Set Auto Clock to Off, then you can set the time manually .

Note: In the case of loss of power, the clock setting will be lost.

Day of Week The TV will calculate current day of week according to the time.

Day of Week The TV will calculate current day of week according to the time.

Daylight Saving Time When Auto Clock set to ON, this item is available to enable daynight saving option or not.

Others Menu

Blue Back Set the screen background color blue or not when no valid signal input. When analog TV input and has no signal, snow noise will display if this option is cleared.

No Signal Power Off If it is set, TV will automatically enter standby after 10 minutes without signal input.

No Operation Power Off If it is set, TV will automatically enter standby after 3 hours without any operation.

All Reset When you highlight the item, the system will note you that"**Attention! If [All Reset] was executed, TV system is reset**" , and if you are sure to reset, press ENTER to reset .

Audio Only When you highlight the item, the system will note you that "**Attention! Hold on power key 3 second to restore video**", and if you are sure not need to view video, please hold on the power button for 3 seconds.

HELP

No Power	Check the AC cord of TV is plus in or not. If still no power, please Pull out the plug and replug in after60 seconds. And open the TV again.
Signal receive not properly	To cause double image or phantom if there has high building or high mountain round -TV. You can adjust image effect by manually operation: consult instruction of vernier regulation or change the direction of external antenna. If you use the indoor antenna . under certain circumstance, receive will be more difficult .So you can change the direction of the antenna to adjust the image effect . If can't change image receiving effect either , you have to use external antenna.
No picture	Check the antenna at the back of TV is connected properly or not. Try to select other channels and check whether the TV problem itself or not.
Video is ok ,but without audio	Increase the volume. Check the TV is in mute mode or not , and please press the mute button to make sound resume.
Audio is ok, but color error or no picture.	Increase contrast and brightness.
snow statics picture and noise	Check the antenna at the back of TV is connected or not .
Level broken line	Maybe has electrical appliance interfere, such as hair drier, vacuum cleaner and so on, please turn off these kinds of electrical appliance.
Dual-Image or "simulacrum" The TV no response with the Remote.	Perhaps the location for the antenna is not good.Use the tall beamed antenna can be improved quality of the display image. Operate the remote direct to the remote sensor on the TV.If still no response for the TV, please check if the plastic bag on the remote take or not. And checkif the location for the battery is correct.Change the new battery. The TV will shift to the STAND BY if no response from the remote in the few minutes.
NO Video In. (PC Mode)	Please check if the display cable connect to the VGA correcte . Please check if there has the bend on the display cable.
Vertical twinkling (PC Mode)	Enter the main menu, Use the clock regulator for the Video display noise to eliminate the vertical line.
horizontal ripping (PC Mode)	Adjust the Audio sound horizontal in the main menu to clear the horizontal ripping line.
The screen is too bright or too dark (PC Mode)	Adjust the contrast ratio or brightness in the main menu.
PC Function no response	Check the computer setting in the state of compatible display resolution
Ripping line in RCA connecting	Please use good quality connecting cable.
Problem still exist	Unplug the power cable and wait for 30 seconds, then connect.If there is some problem with our TV, do not repair it by yourself, please contact with the customer service center.

Note: There will be complete picture and the brightness will come down if the TV is in the static picture for too long time, So please do not keep the TV in a state of same Menu or same picture that has much difference in brightness and contrast ratio for too long time.

www.westinghousedigital.com

S/N: _____

Westinghouse Digital, LLC
Orange, CA

SE-UM-3701-0101